



To minimize potential grounding problems, a Binding Post Kit (EPC PN: 802350) is supplied with the recorder.

There are eight potential mounting locations for the Binding Post on the GSP1086. This example shows how to attach the mounting lug to one of them.

- 1)** Remove the countersunk screw from the case assembly.

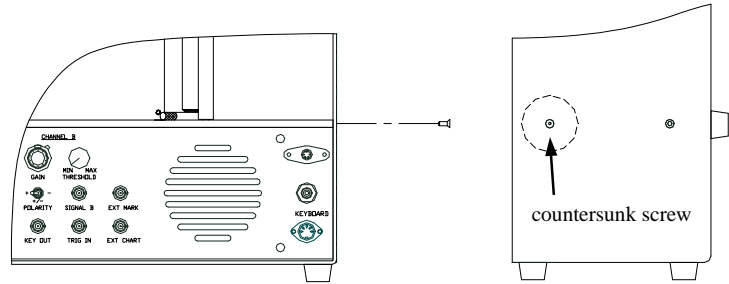

- 2)** Replace the screw with the Binding Post supplied.

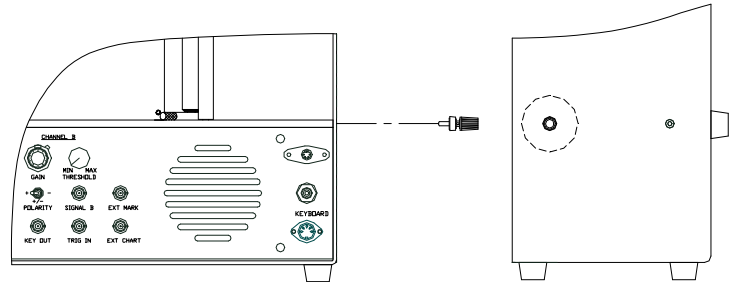

through hole.

- 3)** There is a small through hole in the Binding Post. A 18 to 14 gauge nail can be used to "bayonet" the Binding Post and tighten it into position. If one is not available then a 1/16 hex wrench may be used.



**NOTE:** Do not over tighten the Binding Post.

- 4)** Finally, a ground wire may be attached to the Binding Post in one of two ways. Either use a standard size Banana Jack to plug into the front of the Binding Post or use the through hole to accommodate up to a 12 AWG hook up wire.

